

Assembling Model 3000

Pyramid Garden

TO ASSEMBLE EACH BAND

Your *Pyramid* has three corrugated aluminum bands. Each band is self locking. End of band with the "T" should be inserted from the outside into the slotted end and pulled back to lock. See drawing below.

You will need approximately one cubic yard of good rich top soil to fill all rings.



FOLLOW THESE STEPS:

FIRST TERRACE

Using a center stake, a three-foot length of string and a stick to mark with, you can indicate a guide line on the ground. Now lay the longest of the three aluminum bands to form the first circular terrace. After first band is placed, set sprinkler unit so that hose connection extends under and out from the bottom band. Cover head of sprinkler and hose end with tape so that sand or dirt will not clog sprinkler head while *Pyramid*


is being erected. Fill circular area with rich soil and allow for settling that will occur.

SECOND TERRACE

Now center the second band over the soil in the first terrace. Guide the sprinkler and hose through second terrace. Fill with rich soil allow for settling.


THIRD TERRACE

Center the sprinkler unit so that sprinkler head extends about two inches above top of soil when you fill this top band. Remove tape from sprinkler and hose now.

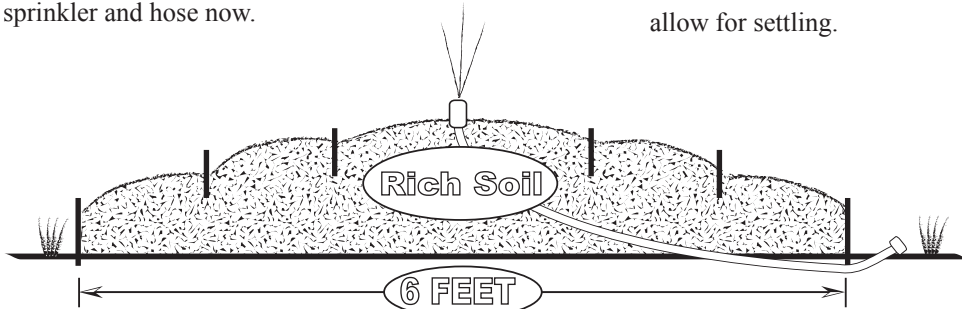

PLANTING INSTRUCTIONS

Plants should be evenly spaced and planted in loosened soil as shown in illustration: not too deep nor too shallow. Water after planting and then regularly with the easy to use *Pyramid* Sprinkler.

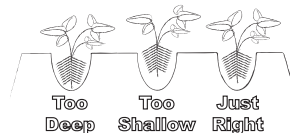

ASSEMBLY and OPERATING INSTRUCTIONS for *Pyramid Garden* Model 3000

1-2012 Pt. #52116

EarthWay® GARDEN


EarthWay Products, Inc.
P.O. Box 547
Bristol, IN 46507
Phone: 800-294-0671
www.EarthWay.com

HELPFUL ACCESSORIES FOR YOUR

Pyramid Garden


SUPPORT FRAME - 3020A

New support frame is made of six steel rods that form a perfect hemisphere over the *Pyramid*. Frame is required for both netting and the plastic cover. Bend each Rod as illustrated at the right and below. The Support rods are clamped together by metal stamping and secure with nut and bolt. Place one of the metal stamping on a flat surface. Next place the end of each rod in the grooves. Place other metal stamping on top then bolt together. Starting with one Rod, push straight end into the soil outside diameter of lowest tier.

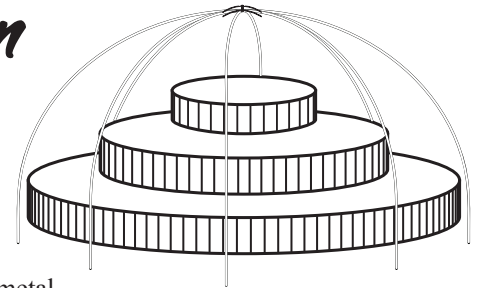

LAST 12"
STRAIGHT



BEND SLIGHTLY

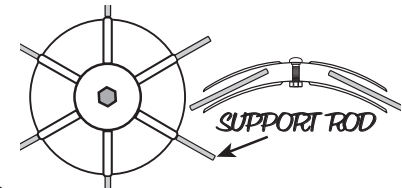

Protect your garden from birds with durable netting

NETTING -3041A

This is strong, durable marine-type netting that is suspended over the support frame. Net protects garden from birds and also holds mulch for winter protection. Secure to frame with enclosed twine.

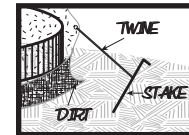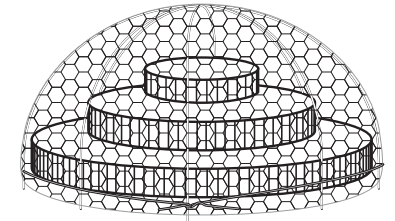

Two uses for the cover

PLASTIC COVER -3042A

The plastic cover is suspended over the support frame and tied in place with the twine and stakes included. It can serve as protection against frost for early planting and also as a method of getting seedlings off to an early growing start for later transplanting.

